## All technical data refer to the measure mm

## **HELICOIL®** Plus Kit - Repair range

M10 x 1 - M14 x 1,25 | 3 dimensions in 3 lengths

HELICOIL® Plus kit - repair portfolio for spark plug threads.

### Delivery scope:

- $\bullet$   ${\sf HELICOIL}^{\circledR}$  Plus thread inserts per size and length
- Combined HELICOIL® drilling and tapping tools 2 in 1
- HELICOIL® Plus installation mandrels
- Tang break-off pliers
- Practical case for storage and transport
- Operating instructions

## Note:

Refill packs containing the fitting  $\mathsf{HELICOIL}^{@}$  thread inserts are available for these  $\mathsf{HELICOIL}^{@}$  kits.

### Items:

10 pieces  $\mathsf{HELICOIL}^{\texttt{®}}$  Plus thread inserts per size and length.

Technical information can be found on the last page.





M 10x1 - M14x1.25 41864000001



# All technical data refer to the measure mm

## **HELICOIL® Plus** thread inserts

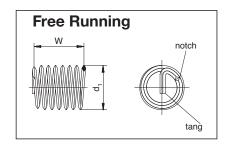

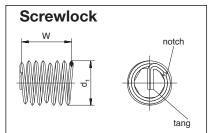

W and d<sub>1</sub> are the control values for thread inserts (Free Running and Screwlock) before they have been installed. The length can only be measured for installed thread inserts.

**Assembly** 

tang not broken off

## **Holding thread**

## ⊢ D<sub>HC</sub> -D1HC-

## DHC D HC D<sub>1HC</sub> 60

Prior to tapping, counter-bore 90° and deburr. Outside diameter of **countersink** =  $D_{HC}$  + 0.1 mm.

- d = Nominal thread diameter
- = Thread pitch
- = Outside diameter of thread insert prior to installa-
- = Number of threads prior to installation
- $D_{HC}$  = Outside diameter of the parent thread
- D<sub>1HC</sub>= Crest diameter
- = Suitable twist drill diameter. Please note: D<sub>1HC</sub> is critical for selecting the correct twist drill diameter.
- = Minimum depth of tapped hole according to DIN 76 - Part 1 (guide value)
- = The nominal length of the thread insert corre $t_2$ sponds to the minimum length of the full parent thread for blind holes or the minimum plate thickness for a through hole.
- = Maximum screw-in depth when the tang is not
- = Distance of the thread insert from the joint face =  $t_5$ 0.25 to 0.5 P, if t<sub>2</sub> corresponds to the abovementioned minimum value

When you use HELICOIL® Plus thread inserts for volume production, we recommend to add at least 1 x P to values  $t_1$  and  $t_2$ .

